
# EOMNIA

# **SMART LOCK**

# **Programming Instructions**

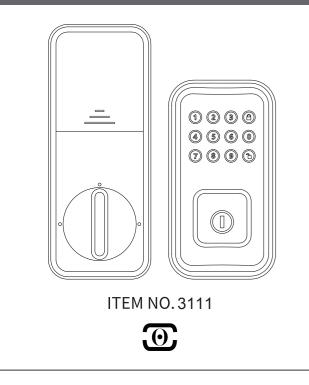

## Factory default settings


**Parts Illustrations** 

SETTINGS	FACTORY DEFAULT
Master code	123456
Auto lock	Disabled
Silent mode	Disabled
Wrong code entry limit	5 times
Shutdown time	3 mins
Vacation mode	Disabled

The default master code is 123456. It's required that you change it to a code of your own before programming.

ITEM	SPECIFICATIONS	REMARKS
Battery (Using only new and non-rechagerable alkaline batteries for the best results.)	AA alkaline battery x4 (Operation voltage:4.6~6.0V)	10 administrators 70 users 20 one-time codes

# Quick set up

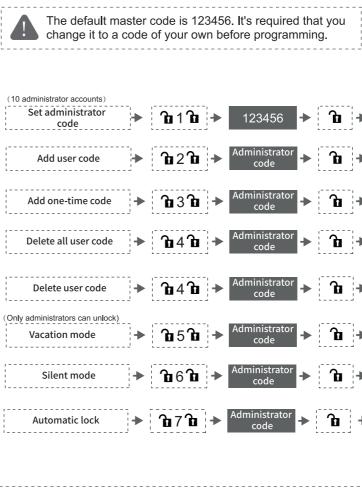


### Information and Safety warnings


#### ☆ Protect your user codes and master code.

☆ Restrict access to your lock's interior assembly and routinely check your settings to ensure they have not been altered without your knowledge.


\_\_\_\_\_

1. Master PIN Code (6-8 digits), the default master pin code is "123456", it's required that you change it to a code of your own before programming. 2. User PIN Code (6-8 digits).

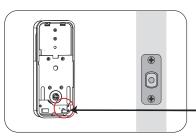


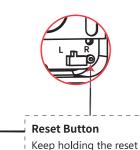

button until you hear the long sound of "beep".

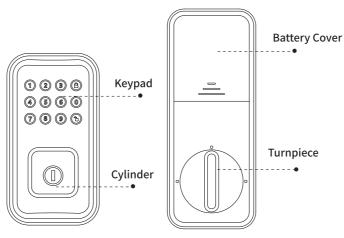



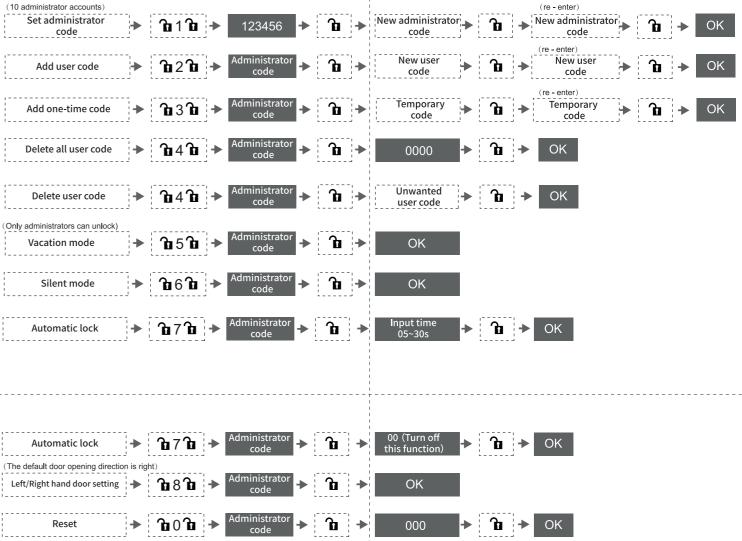

#### **OTHER REMARKS:**

1. Press 🔒 lock.

2. Password + 🛍 unlock.

3. After 5 incorrect input times, the system locks and unlocks after 3 minutes.

4. After the low voltage alarm, it can continue to be used for around 50 times to unlock, please replace old batteries with new ones as soon as possible.

\_\_\_\_\_