


## STRIKE FOR INTERIOR MORTISE LOCK

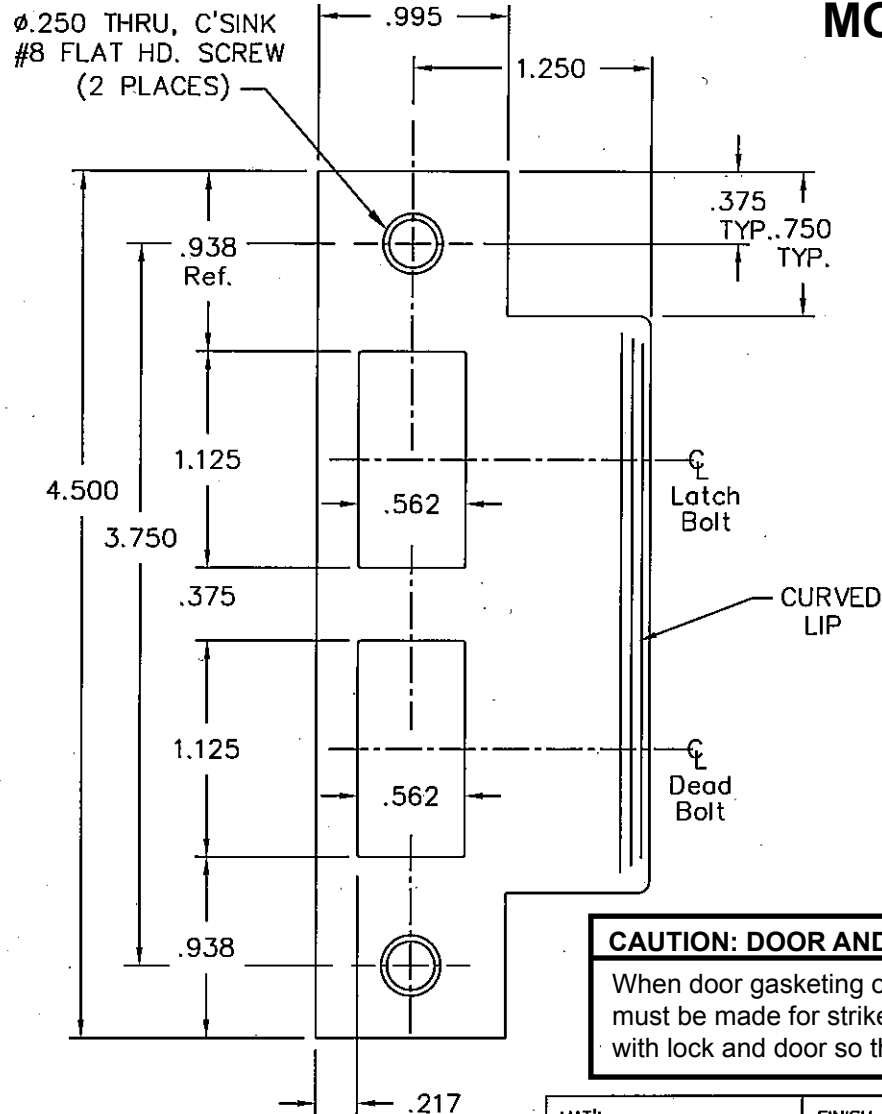

**CAUTION: DOOR AND FRAME MANUFACTURERS**

When door gasketing or silencers are used, proper allowances must be made for strike location to maintain a common centerline with lock and door so that the bolt will freely enter strike.

**NOTE: Template may not be true-to-size. Please use for reference purposes only. Do NOT drill until measurements are verified.**

SCALE: 1=1

MAT'L: .093 THK. BRASS/SS	FINISH: US	QTY: 1 (AS SHOWN) X (OPPOSITE)
TOLERANCES - UNLESS OTHERWISE NOTED:		APPROVAL
FRACTIONAL:	$\pm 0.03$	NOTES: NEXT ASS'Y:
2-PLACE DECIMAL:	$\pm 0.01$	
3-PLACE DECIMAL:	$\pm 0.005$	DWG. NO.
ANGULAR:	$\pm 1'$	REV