


STRIKE FOR INTERIOR MORTISE LOCK

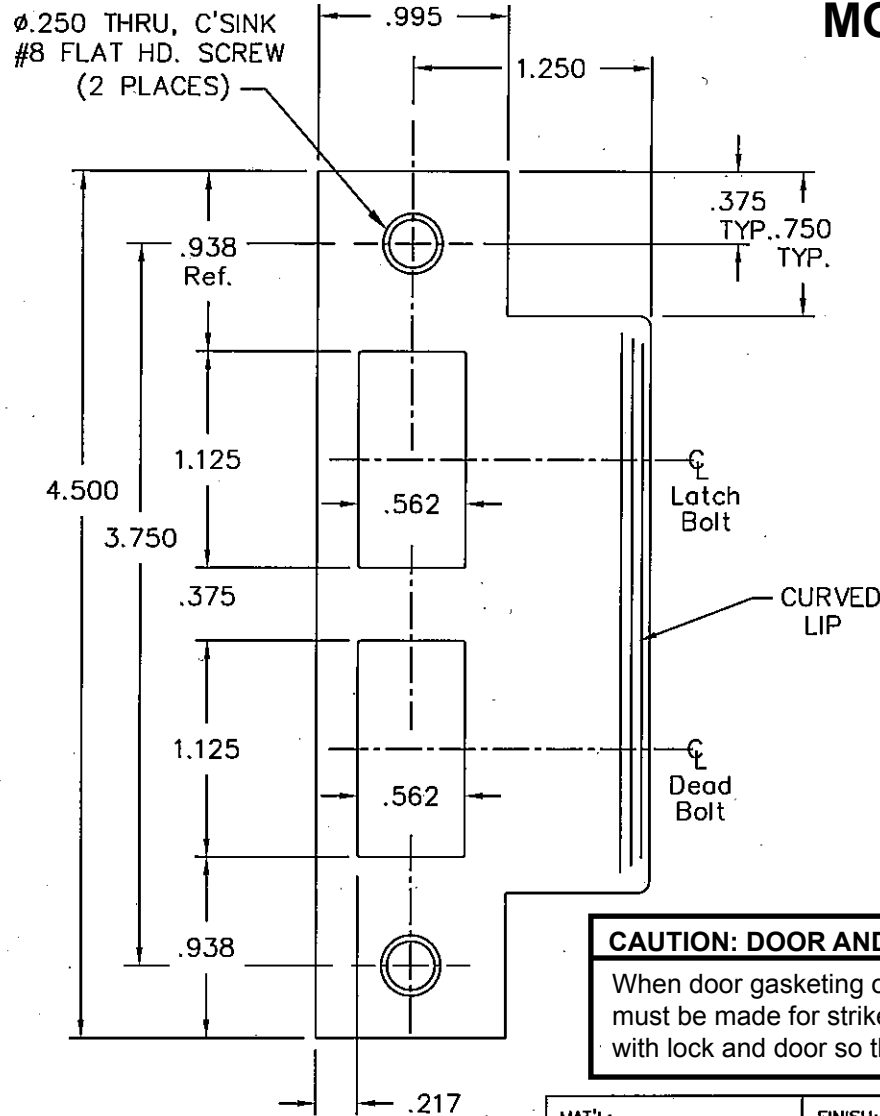

CAUTION: DOOR AND FRAME MANUFACTURERS

When door gasketing or silencers are used, proper allowances must be made for strike location to maintain a common centerline with lock and door so that the bolt will freely enter strike.

**NOTE: Template may not be true-to-size.
Please use for reference purposes only.
Do NOT drill until measurements are verified.**

SCALE: 1=1

MAT'L: .093 THK. BRASS/SS	FINISH: US	QTY: 1 (AS SHOWN) X (OPPOSITE)
TOLERANCES - UNLESS OTHERWISE NOTED:		NOTES:
FRACTIONAL:	±0.03	NEXT ASS'Y:
2-PLACE DECIMAL:	±0.01	DWG. NO.
3-PLACE DECIMAL:	±0.005	APPROVAL
ANGULAR:	±1°	REV