3500/3600 "N" 2 1/2" BACKSET
INTERIOR PASSAGE MORTISE LOCK INSTALLATION TEMPLATE

NOTE: Template may not be true-to-size. Please use for reference purposes only. Do NOT drill until measurements are verified.

CAUTION: DOOR AND FRAME MANUFACTURERS

When door gasketing or silencers are used, proper allowances must be made for strike location to maintain a common centerline with lock and door so that the bolt will freely enter strike.
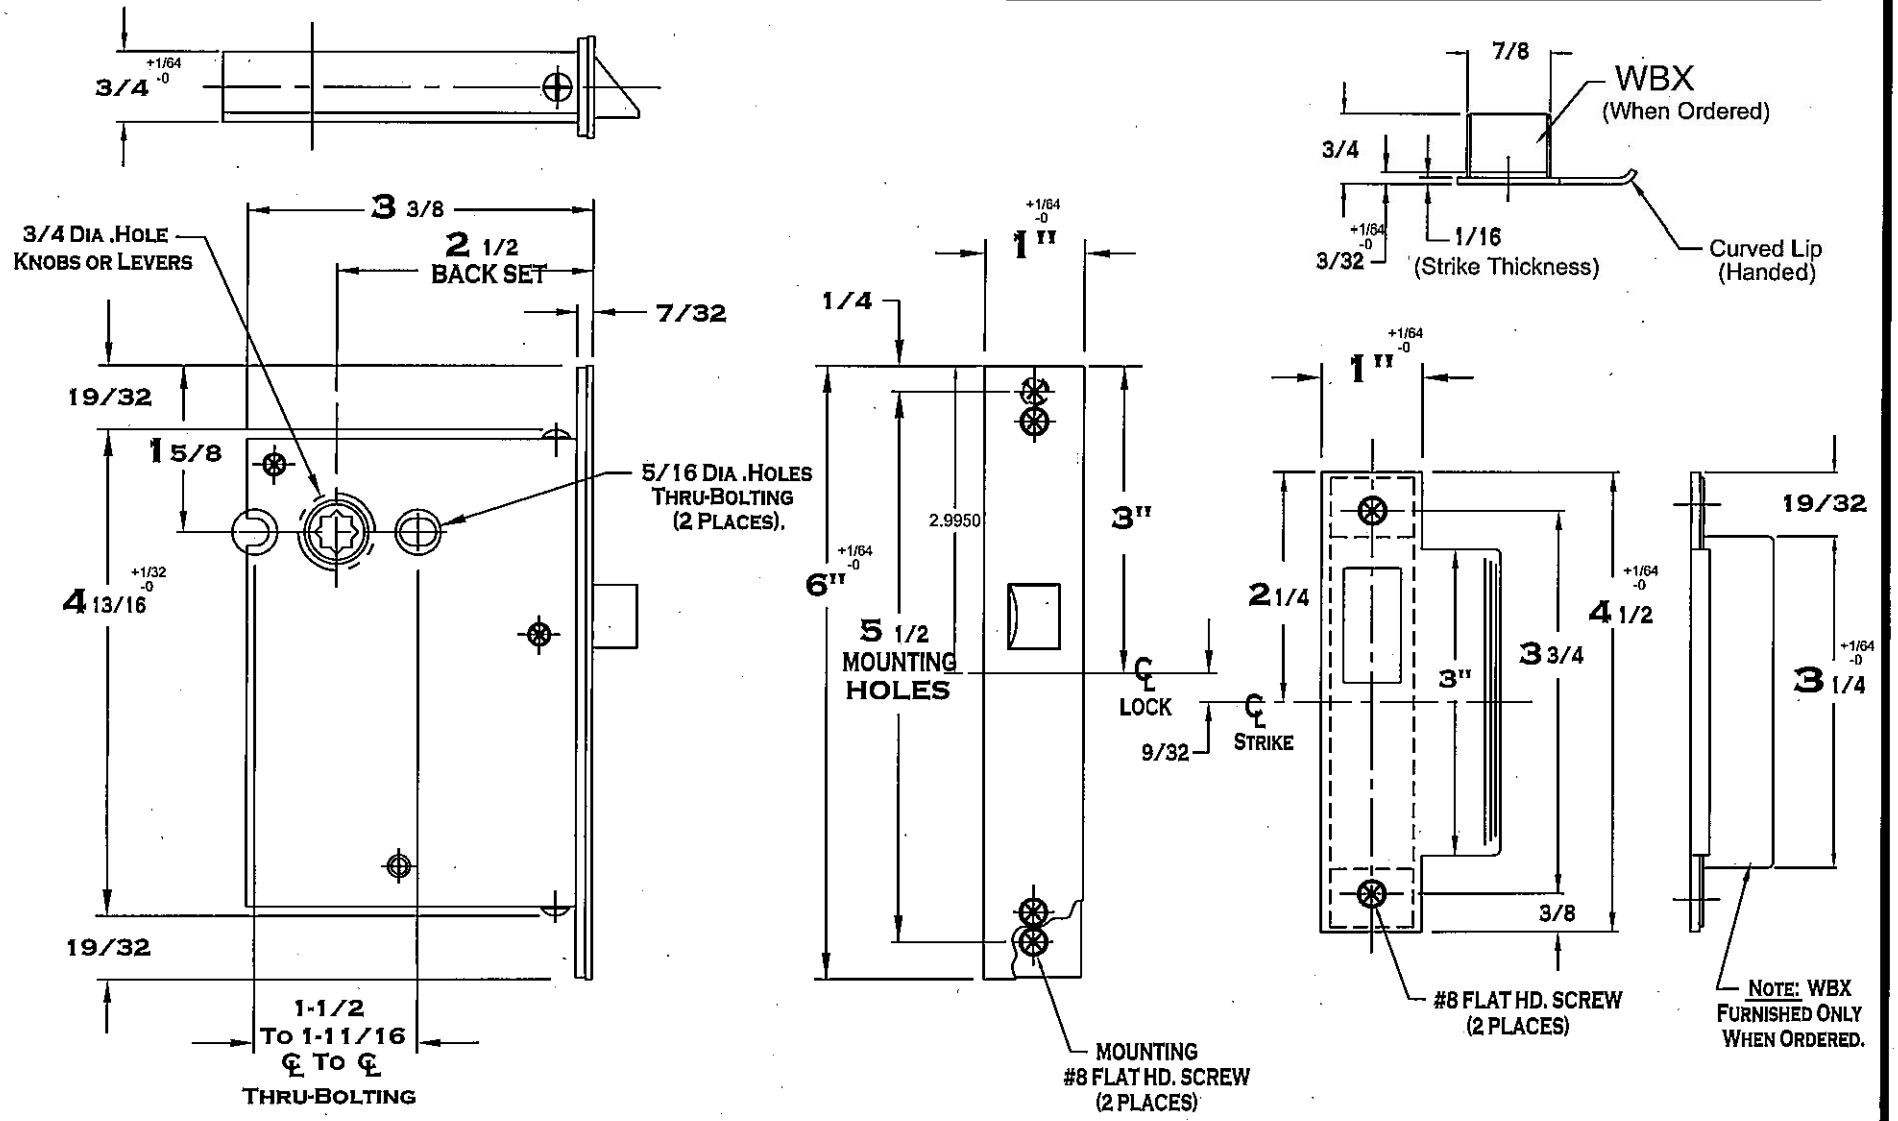
Note: All Dimensions Reflect Suggested Mortise Prep Dimensions.